

تعليمات التثبيت/الاستخدام

عند استخدام المنتج لأول مرة، يرجى شحبه بالكامل.

إذا لم يتم استخدام المنتج لفترة طويلة، يرجى شحبه بالكامل ووضعه بالترتيب لتجنب التأثير على عمر البطارية.

° يجب ألا يوضع المنتج براويه ميل تزيد عن 6

لا تستخدم المنتج في بيئة ذات درجة حرارة عالية ورطوبة عالية.

لا تستخدم الماء لغسل المنتج، وإلا سيحدث ماس كهربائي.

يرجى عدم تفكيك المنتج أو إصلاحه أو تعديله بنفسك.

توضيح معلومات الأمان

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Pokyny k instalaci a používání

Při prvním použití produkt plně nabijte.

Pokud produkt delší dobu nepoužíváte, plně jej nabijte a uložte, abyste neovlivnili životnost baterie.

Produkt nesmí být umístěn v úhlu sklonu větším než 6°.

Nepoužívejte produkt v prostředí s vysokou teplotou a vysokou vlhkostí.

K oplachování produktu nepoužívejte vodu, jinak dojde ke zkratu.

Produkt sami nerozebírejte, neopravujte ani neupravujte.

Informace o bezpečnosti

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Installation/brugsanvisning

Når du først bruger produktet, skal du oplade det fuldt ud.

Hvis produktet ikke bruges i lang tid, skal du oplade det fuldt ud og placere det for at undgå at påvirke batteriets levetid.

Produktet må ikke placeres i en hældningsvinkel på mere end 6°.

Brug ikke produktet i et miljø med høj temperatur og høj luftfugtighed.

Brug ikke vand til at skylle produktet, ellers opstår der kortslutning.

Du må ikke selv adskille, reparere eller modificere produktet.

Erklæring om sikkerhedsoplysninger

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Installations-/Benutzeranleitung

Bitte laden Sie das Produkt bei der ersten Nutzung vollständig auf.

Wenn das Produkt längere Zeit nicht verwendet wird, laden Sie es bitte vollständig auf und lagern Sie es, um die Lebensdauer der Batterie nicht zu beeinträchtigen.

Das Produkt sollte nicht in einem Winkel von mehr als 6° geneigt gelagert werden.

Verwenden Sie das Produkt nicht in einer Umgebung mit hohen Temperaturen und hoher Luftfeuchtigkeit.

Verwenden Sie kein Wasser, um das Produkt zu reinigen, da es sonst zu einem Kurzschluss kommen kann.

Bitte zerlegen, reparieren oder modifizieren Sie das Produkt nicht selbst.

Sicherheitshinweise

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Εγκατάσταση/Οδηγίες χρήσης

Όταν χρησιμοποιείτε το προϊόν για πρώτη φορά, παρακαλούμε φορτίστε το πλήρως.

Εάν το προϊόν δεν χρησιμοποιηθεί για μεγάλο χρονικό διάστημα, παρακαλούμε φορτίστε το πλήρως και τοποθετήστε το για να αποφύγετε την επίδραση στη διάρκεια ζωής της μπαταρίας.

Το προϊόν δεν πρέπει να τοποθετείται σε γωνιά κλίσης μεγαλύτερη από 6°.

Μην χρησιμοποιείτε το προϊόν σε περιβάλλον υψηλής θερμοκρασίας και υψηλής υγρασίας.

Μην χρησιμοποιείτε νερό για να ξεπλύνετε το προϊόν, διαφορετικά θα προκληθεί βραχυκύκλωμα.

Παρακαλώ μην αποσυαρμολογείτε, επισκευάζετε ή τροποποιείτε το προϊόν μόνοι σας.

Δήλωση πληροφοριών ασφαλείας

1. Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
2. Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
3. This toy contains batteries that are non-replaceable.
4. Batteries are only to be charged by persons of at least 8 years old.

Installation/Instructions for Use

When you firstly use the product, please charge it full.

If the product isn't used for a long time, please charge it full and place in order to avoid influencing the battery life.

he product shall not be placed at an angle of inclination of more than 6°.

Don't use the product under a high-temperature and high-humidity environment.

Don't use water to flush the product, otherwise short circuit will occur.

Please don't dismantle, repair or modify the product by yourself.

Safety Information Statement

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Instrucciones de instalación/uso

Al usar el producto por primera vez, por favor cárguelo completamente.

Si el producto no se utiliza durante mucho tiempo, cárguelo completamente y colóquelo en un lugar adecuado para evitar afectar la vida útil de la batería.

El producto no debe colocarse con un ángulo de inclinación superior a 6°.

No utilice el producto en un ambiente de alta temperatura y alta humedad.

No utilice agua para limpiar el producto, de lo contrario se producirá un cortocircuito.

Por favor, no desmonte, repare ni modifique el producto por su cuenta.

Información de seguridad

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Paigaldamine/kasutusjuhised

Toote esmakordsel kasutamisel laadige see täielikult täis.

Kui toodet pole pikka aega kasutatud, laadige see täielikult täis ja asetage see, et vältida aku kasutusea mõjutamist.

Toodet ei tohi asetada rohkem kui 6° kaldenurga alla.

Ärge kasutage toodet kõrge temperatuuri ja kõrge õhuniiskusega keskkonnas.

Ärge kasutage toote loputamiseks vett, vastasel juhul tekib lühis.

Palun ärge võtke toodet ise lahti, parandage ega muutke.

Ohutusteabe avaldus

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Asennus-/käyttöohjeet

Kun käytät tuotetta ensimmäistä kertaa, lataa se täyteen.

Jos tuotetta ei käytetä pitkään aikaan, lataa se täyteen ja sijoita se asianmukaisesti, jotta akun käyttöikä ei vaaranneta.

Tuotetta ei tule sijoittaa kulmaan, jonka kallistus on yli 6°.

Älä käytä tuotetta korkean lämpötilan ja korkean ilmankosteuden ympäristössä.

Älä käytä vettä tuotteen puhdistamiseen, sillä se voi johtaa oikosulkuun.

Älä purkaa, korjaa tai muokkaa tuotetta itse.

Turvallisuustiedot

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Instructions d'installation et d'utilisation

Lorsque vous utilisez le produit pour la première fois, veuillez le charger complètement.

Si le produit n'est pas utilisé pendant une longue période, veuillez le charger complètement et le ranger afin de ne pas affecter la durée de vie de la batterie.

Le produit ne doit pas être placé à un angle d'inclinaison supérieur à 6°.

N'utilisez pas le produit dans un environnement à haute température et à forte humidité.

N'utilisez pas d'eau pour rincer le produit, sinon un court-circuit se produira.

Veuillez ne pas démonter, réparer ou modifier le produit vous-même.

Informations sur la sécurité

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Upute za instalaciju/upotrebu

Kada prvi put koristite proizvod, molimo vas da ga potpuno napunite.

Ako proizvod ne koristite dulje vrijeme, molimo vas da ga potpuno napunite i pohranite na odgovarajuć način kako biste izbjegli utjecaj na trajanje baterije.

Proizvod ne smije biti postavljen pod nagibom većim od 6°.

Ne koristite proizvod u okruženju s visokom temperaturom i visokom razinom vlage.

Ne koristite vodu za ispiranje proizvoda jer bi to moglo dovesti do kratkog spoja.

Molimo vas da ne rastavljate, ne popravljate niti ne mijenjate proizvod sami.

Sigurnosne informacije

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Telepítés/Használati utasítás

Amikor először használja a terméket, kérjük, töltsse fel teljesen.

Ha a terméket hosszabb ideig nem használja, kérjük, töltsse fel teljesen, és helyezze el úgy, hogy elkerülje az akkumulátor élettartamának befolyásolását.

A terméket nem szabad 6"-nál nagyobb dőlésszögben elhelyezni.

Ne használja a terméket magas hőmérsékletű és magas páratartalmú környezetben.

Ne használja a terméket vízzel, különben rövidzárlat lép fel.

Kérjük, ne szerelje szét, javítsa vagy módosítsa a terméket saját maga.

Biztonsági tájékoztató nyilatkozat

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Uppsetningar-/notkunarleiddbeiningar

Þegar þú notar vöruna í fyrsta skipti skaltu hlaða hana að fullu. Ef varan er ekki notuð í langan tíma skaltu hlaða hana að fullu og setja hana á sinn stað til að forðast að hafa áhrif á endingu rafhlöðunnar. Varan má ekki vera staðsett í halla meira en 6°. Ekki nota vöruna við háan hita og háan raka. Ekki nota vatn til að skola vöruna, annars kemur upp skammhlaup. Vinsamlegast ekki taka vöruna í sundur, gera við eða breyta henni sjálfur.

Öryggisupplýsingar

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Istruzioni di installazione/utilizzo

Quando si utilizza il prodotto per la prima volta, si prega di caricarlo completamente.

Se il prodotto non viene utilizzato per un lungo periodo, si prega di caricarlo completamente e di riporlo in modo da evitare di influire sulla durata della batteria.

Il prodotto non deve essere posizionato con un angolo di inclinazione superiore a 6°.

Non utilizzare il prodotto in ambienti ad alta temperatura e ad alta umidità.

Non utilizzare acqua per pulire il prodotto, altrimenti si verificherà un cortocircuito.

Si prega di non smontare, riparare o modificare il prodotto da soli.

Informazioni sulla sicurezza

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

取り付け/使用説明

初めて製品を使用する際は、完全に充電してください。

製品を長期間使用しない場合は、完全に充電し、置く際にはバッテリー寿命に影響を与えないようにしてください。

製品は、傾斜角が6°を超えないように配置してください。

高温・高湿度の環境下では製品を使用しないでください。

製品を水で洗うことは避けてください。そうしないと短絡が発生する可能性があります。

製品を自分で分解・修理・改造しないでください。

安全情報の説明

- 1、Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、This toy contains batteries that are non-replaceable.
- 4、Batteries are only to be charged by persons of at least 8 years old.

설치/사용 설명서

제품을 처음 사용하실 때는 완전히 충전해 주시기 바랍니다.

제품을 오랜 시간 사용하지 않을 경우, 배터리 수명에 영향을 주지 않기 위해 완전히 충전하신 후 보관해 주시기 바랍니다.

제품은 6° 이상의 각도로 기울여 두지 마시기 바랍니다.

고온 및 고습도 환경에서는 제품을 사용하지 마십시오.

제품을 물로 세척하지 마십시오. 그렇지 않으면 단락이 발생할 수 있습니다.

제품을 직접 분해, 수리, 수정하지 마십시오.

안전 정보 설명

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Montavimas / naudojimo instrukcijos

Kai pirmą kartą naudojate produktą, prasšme jį visiskai jkrauti.

Jei produktas nenaudojamas ilgą laiką, prasšme jį visiskai jkrauti ir padefi tvarkingai, kad nepakenktumefė akumuliatoriaus tarnavimo laikui.

Produktas neturi būti pastatytas didesniu nei 6° pasvirimo kampu.

Nenaudokite produkto aukštos temperatūros ir dideles drešmes aplinkoje.

Nenaudokite vandens produktui plauti, nes gali įvykti trumpasis jungimas.

Prasšme patiems neišrdyti, neremontuoti ar nemodifikuoti produkto.

Saugos informacijos pareiskimas

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Montāžas/lietošanas instrukcija

Pirmoreiz lietojot produktu, lūdzu, uzlādējiet to pilnībā.

Ja produkts netiek lietots ilgāku laiku, lūdzu, uzlādējiet to pilnībā un novietojiet to tā, lai neietekmētu akumulatora darbības laiku.

Produkts nedrīkst tikt novietots ar slīpumu, kas pārsniedz 6°.

Nelietojiet šo produktu augstas temperatūras un augstas mitruma apstākļos.

Nelietojiet ūdeni, lai notīrītu produktu, jo tas var izraisīt issavienojumu.

Lūdzu, neveiciet pašprodukta demontāž, remontu vai modifikācijas.

Drošības informācijas paskaidrojums

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Installasjon/bruksanvisning

Når du først bruker produktet, vennligst lad det helt opp.

Hvis produktet ikke brukes over lengre tid, vennligst lad det helt opp og plasser det for å unngå å påvirke batterilevetiden.

Produktet skal ikke plasseres i en hellingsvinkel på mer enn 6°.

Ikke bruk produktet under et miljø med høy temperatur og høy luftfuktighet.

Ikke bruk vann til å skylle produktet, ellers vil kortslutning oppstå.

Vennligst ikke demonter, reparer eller modifierer produktet selv.

Erklæring om sikkerhetsinformasjon

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Installatie-/gebruikershandleiding

Wanneer je het product voor de eerste keer gebruikt, laad het dan volledig op. Als het product lange tijd niet wordt gebruikt, laad het dan volledig op en plaats het om de levensduur van de batterij niet te beïnvloeden. Het product mag niet onder een hellingshoek van meer dan 6° worden geplaatst. Gebruik het product niet in een omgeving met hoge temperaturen en hoge luchtvochtigheid. Gebruik geen water om het product schoon te maken, anders kan er een kortsluiting optreden. Demonteer, repareer of wijzig het product niet zelf.

Veiligheidsinformatie uitleg

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Instrukcja montażu/uzycia

Podczas pierwszego użycia produktu, proszę go w pełni naładować.

Jeśli produkt nie jest używany przez dłuższy czas, proszę go w pełni naładować i przechowywać w odpowiednim miejscu, aby nie wpływał negatywnie na żywotność baterii.

Produkt nie powinien być umieszczany pod kątem nachylenia większym niż 5°.

Nie używaj produktu w warunkach wysokiej temperatury i wilgotności.

Nie używaj wody do czyszczenia produktu, ponieważ może to spowodować zwarcie.

Proszę nie rozbiierać, naprawiać ani modyfikować produktu samodzielnie.

Informacje dotyczące bezpieczeństwa

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Instruções de instalação/utilização

Quando utilizar o produto pela primeira vez, carregue-o totalmente.

Se o produto não for utilizado durante muito tempo, carregue-o totalmente e guarde-o para evitar influenciar a vida útil da bateria.

O produto não deve ser colocado num ângulo de inclinação superior a 6°.

Não utilize o produto num ambiente de alta temperatura e alta humidade.

Não utilize água para lavar o produto, caso contrário ocorrerá um curto-circuito.

Por favor, não desmonte, repare ou modifique o produto sozinho.

Informações de segurança

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Instrucțiuni de instalare/utilizare

Când utilizați produsul pentru prima dată, vă rugăm să-l încărcați complet.

Dacă produsul nu este folosit pentru o perioadă lungă de timp, vă rugăm să-l încărcați complet și să-l depozitați pentru a evita influențarea duratei de viață a bateriei.

Produsul nu trebuie plasat la un unghi de înclinare mai mare de 6°.

Nu utilizați produsul într-un mediu cu temperatură ridicată și umiditate mare.

Nu folosiți apă pentru a curăța produsul, altfel se va produce un scurtcircuit.

Vă rugăm să nu demontați, reparați sau modificați produsul de unul singur.

Informații de siguranță

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Instalácia/návod na použitie

Keď produkt používate prvýkrát, nabite ho úplne. Ak sa produkt dlhšiu dobu nepoužíva, nabite ho úplne a uložte, aby ste predišli oplynutiu z kvôli batérii. Produkt nesmie byť umiestnený v uhle sklonu väčšom ako 6°. Nepoužívajte produkt v prostredí s vysokou teplotou a vysokou vlhkosťou. Na čistenie produktu nepoužívajte vodu, inak dôjde ku skratu. Produkt sami nerozoberajte, neopravujte ani neupravujte.

Vyhlasenie o bezpečnostných informáciách

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Navodila za namestitvev/uporabo

Ko izdelek prvič uporabljate, ga popolnoma napolnite.

Če izdelka dlje časa ne uporabljate, ga popolnoma napolnite in shranite, da ne vplivate na zkljenjsko dobo baterije.

Izdelek ne sme biti nameščen pod kotom večjim od 6°.

Izdelka ne uporabljajte v okolju z visoko temperaturo in visoko vlažnostjo.

Izdelka ne spirajte z vodo, sicer lahko pride do kratkega stika.

Izdelka ne razstavlajte, popravljajte ali spreminjajte sami.

Varnostne informacije

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

Installations- och användningsanvisningar

När du använder produkten för första gången, vänligen ladda den helt. Om produkten inte används under en längre tid, ladda den helt och placera den i ordning för att undvika att batteriets livslängd påverkas. Produkten får inte placeras i en lutning som överstiger 6°. Använd inte produkten i en miljö med hög temperatur och hög luftfuktighet. Använd inte vatten för att spola produkten, annars kan kortslutning uppstå. Vänligen demontera, reparera eller modifiera inte produkten själv.

Information om säkerhet

- 1、 Regularly cleaning toys can maintain their good appearance and hygiene condition. Before cleaning, please turn off the power of the toy and unplug it to ensure safety. Gently wipe the surface of the toy with a soft damp cloth. Avoid using rough materials or strong cleaning agents to prevent scratching or damaging the surface of the toy. For difficult to clean stains, mild soapy water or specialized toy cleaners can be used. Dip a damp cloth into the cleaning agent and gently wipe the stain, then dry it with a clean damp cloth. Be careful not to let water or cleaning agents enter the electronic components or battery compartment of the toy to avoid damaging it. If the toy has detachable parts such as cloth covers or plastic accessories, they can be disassembled and cleaned separately. Clean according to the washing instructions of the components and ensure complete drying before reinstallation.
- 2、 Regularly inspect all parts of the toy for damage or looseness. If any problems are found, please repair or replace the parts in a timely manner to ensure the safe use of the toy. Pay attention to the battery usage of toys. If the toy is powered by batteries, please install and replace the batteries correctly according to the instructions. Avoid using expired or damaged batteries to prevent risks such as leakage or explosion. When toys are not in use, please store them in a dry, ventilated place, away from direct sunlight and humid environments. Toys can be properly stored in storage boxes or bags to prevent dust and damage. Avoid subjecting toys to severe impacts or drops to prevent damage to internal electronic components or mechanical structures. If the toy malfunctions or has abnormal conditions, please stop using it immediately and contact our customer service or professional repair personnel for maintenance.
- 3、 This toy contains batteries that are non-replaceable.
- 4、 Batteries are only to be charged by persons of at least 8 years old.

- 1、Charging Tips: When the product is connected to power, the flashing light twice indicates that it is charging. constant Light Mode-Move the switch here, and then night light will always be on. Twenty Mins Delay Twenty-minute Turn-off Mode: when the switch is switched here, it will immediately start a 20-minute countdown, and then slowly turn off the lights after 20 minutes.
- 2、Ladetips: Wenn das Produkt an die Stromversorgung angeschlossen ist, zeigt das blinkende Licht zweimal an, dass es aufgeladen wird. konstanter Lichtmodus-Bewegen Sie den Schalter hier, und das Nachtlicht wird immer an. Zwanzig Minuten Verzögerung Zwanzig Minuten Abschaltmodus: wenn der Schalter hier geschleudert wird, startet er sofort einen 20-minütigen Rückzähl und schaltet dann langsam die Lichter nach 20 Minuten aus.
- 3、Conseils de charge: Lorsque le produit est connecté à l'alimentation, la lumière clignotant indique deux fois qu'il est chargé. Mode de lumière constant - Déplacez l'interrupteur ici, et la lumière nocturne sera toujours allumée. Mode d'arrêt de vingt minutes de retard de vingt minutes: lorsque l'interrupteur est accéléré ici, il démarrera immédiatement un compte à rebours de 20 minutes, puis éteindra lentement les lumières après 20 minutes.
- 4、Consejos de carga: Cuando el producto está conectado a la alimentación, la luz parpadeante dos veces indica que está cargando. Modo de luz constante - Mueve el interruptor aquí, y la luz nocturna siempre estará encendida. Modo de apagado de veinte minutos de retraso de veinte minutos: cuando el interruptor se acelera aquí, inmediatamente iniciará una cuenta regresiva de 20 minutos y luego apagará lentamente las luces después de 20 minutos.
- 5、Consigli di ricarica: Quando il prodotto è collegato all'alimentazione, la luce lampeggiante due volte indica che sta ricaricando. Modalità di luce costante - Sposta l'interruttore qui e la luce notturna sarà sempre accesa. Modalità di spegnimento di 20 minuti di ritardo: quando l'interruttore è accelerato qui, inizierà immediatamente il conto alla rovescia di 20 minuti e poi spegnerà lentamente le luci dopo 20 minuti.
- 6、充電のヒント:製品が電源に接続されたとき、充充電していることを2回点燃するライトは指示します。恒定的な光モード-ここでスイッチを移動し、thenight ライトは常にオンになります。20分遅延 20分のオフモード:スイッチがここでスピフトされたとき、それは即座に20分のカウントダウンを開始し、そして20分後にゆっくりとライトをオフにします。
- 7、Tipy pro nabíjení: Když je produkt připojen k napájení, blikající světlo dvakrát naznačuje, že se nabije. Konstantní světelný režim - Přesuněte přepínač sem a noční světlo bude vždy zapnuto. Dvacetiminutové zpoždění Dvacetiminutový režim vypnutí: když je přepínač zde zrychlený, okamžitě spustí 20-minutový odpočítávání a pak po 20 minutách pomalu vypne světla.
- 8、Porady ładowania: Kiedy produkt jest podłączony do zasilania, migające światło dwa razy wskazuje, że ładuje się. Tryb stałego światła - Przenieś przełącznik tutaj, a światło nocne zawsze będzie włączone. Dwadzieści minut opóźnienia Dwadzieści minut trybu wyłączenia: gdy przełącznik jest przyspieszony tutaj, natychmiast rozpocznie 20-minutowe odliczanie odwrotne, a następnie powoli wyłączy światła po 20 minutach.
- 9、Laadtips: Wanneer het product is aangesloten op stroom, geeft het knipperende licht twee keer aan dat het oplaadt. constante lichtmodus-Beweeg de schakelaar hier en het nachtlicht zal altijd aan zijn. Twintig minuten vertraging Twintig minuten uitschakelmodus: wanneer de schakelaar hier wordt versneld, zal het onmiddellijk een aftelling van 20 minuten starten en vervolgens langzaam de lichten na 20 minuten uitschakelen.
- 10、Laddningstips: När produkten är ansluten till ström indikerar blinkande ljus två gånger att den laddas. konstant ljusläge-Flytta brytaren här och nattljuset kommer alltid att vara på. Tjugo minuter fördröjning Tjugo minuters avstängningsläge: när brytaren snabbas här börjar den omedelbart en 20-minuters nedräkning och stänger sedan saktat av ljusen efter 20 minuter.
- 11、Συμβουλές φόρτισης: Όταν το προϊόν είναι συνδεδεμένο με ρεύμα, το φως που αναμπλέπει δύο φορές υποδεικνύει ότι είναι charging.constant Light Mode-Move το διακόπτη εδώ, και το φως της νύχτας θα είναι πάντα on. Twenty λεπτά καθυστέρηση είκοσι λεπτά λειτουργία απενεργοποίησης: όταν ο διακόπτης επιταχύνεται εδώ, θα ξεκινήσει αμέσως την αντίστροφη μέτρηση 20 λεπτών και στη συνέχεια θα απενεργοποιήσει σιγά τα φώτα μετά από 20 λεπτά.
- 12、Opladningstips: Når produktet er tilsluttet strøm, indikerer det blinkende lys to gange, at det oplader. konstant lystilstand-Flyt skiften her, og nattelyset vil altid være tændt. Tyve minutters forsinkelse Tyve minutters slukningstilstand: når skiften er hurtigt her, vil den straks starte en 20-minutters nedtælling og derefter langsomt slukke lysene efter 20 minutter.
- 13、Töltési tipp: Amikor a termék csatlakoztatva van az áramhoz, a villogó fény kétszer jelzi, hogy töltődik. állandó fénymód - mozgattja a kapcsolót ide, és az éjszakai fény mindig be lesz kapcsolva. Húsz perc visszaszámlálás: húsz perc kikapcsolási mód: amikor a kapcsoló itt gyorsul, azonnal elkezd a 20 perces visszaszámlálást, majd lassan kikapcsolja a fényeket 20 perc után.
- 14、المستمر الضوء وضع. شحنه يتم أنه إلى مرتين المتوهج الضوء بشير ، بالطاقة المنتج توصيل يتم عندما: الشحن نصائح تسريعالمفتاح يتم عندما: دقيقة عشرين لمدة التأخير إيقاف وضع. مفتوحًا دائمًا الليلي الضوء يكون وسوف ، هنا المفتاح حركة. دقيقة 20 بعد بطء الأضواء يطفى ثم ، الفور على دقيقة 20 لمدة التنازلي العد يبدأ فسوف ، هنا.
- 15、Съвети за зареждане: Когато продуктът е свързан с захранване, мигащата светлина д

ва пѣти показва, че се зарежда. Постоянен режим на светлина - Преместете превключва теля тук и ноцната светлина винаги ще бѣде включена. Двадесет минути забавяне Два десет минути режим на изключване: когато превключвателят се ускори тук, той незабав но ще започне 20-минутно обратно броене и след това бавно ще изключи светлините с лед 20 минути.

16、Laadimise nāpunāited: Kui toode on ūhendatud vōimsusega, vālgib valgus kaks korda, et see laadib. konstantne valguse režiim - liigutage lūliti siia ja õdvalgus on alati sisse lūlitatud. Kaksikūmmend minutit viivutida Kaksikūmmend minutit vāljālūlitamise režiim: kui lūliti kiirendatakse siin, alustab see koheselt 20 minutit tagasilōengut ja seejārel aeglaselt vālja lūlitada tuled pārast 20 minutit.

17、Latausvinkkejā: Kun tuote on kytketty virtaan, vilkkuva valo kaksi kertaa osoittaa, ettā se on latauksessa. Vakava valotila-Siirrä kytkin tänne, ja yövalo on aina pāällä. Kaksikymmentā minuuttia viivāstymistā Kaksikymmentā minuuttia sammuttamistila: kun kytkin on nopeutettu tāällä, se aloittaa vāllittōmāsti 20 minuutin laskennan ja sammuttaa valot hitaasti 20 minuutin kuluttua.

18、Savjeti za punjenje: Kada je proizvod povezan s napajanjem, treperilo svjetlo dva puta ukazuje na punjenje. Konstantni naēin svjetlosti - Pomaknite prekidaē ovdje, a noēno svjetlo ēe uvijek biti ukljuēeno. Dvadeset minuta kašnjjenja Dvadeset minuta Mode iskljuēenja: kada se prekidaē ubrza ovdje, odmah ēe zapoēeti odbrojavanje od 20 minuta, a zatim polako iskljuēiti svjetla nakon 20 minuta.

19、Ikrovimo patarimai: Kai produktas yra prijungtas prie maitinimo, mirkanēioji šviesa du kartus rodo, kad jis yra įkrojamas. Nuolatinis šviesos režiimas - Perkelkite jungiklį čia, o naktinė šviesa visada bus įjungta. Dvidešimt minučių vėlavimas Dvidešimt minučių išjungimo režiimas: kai jungiklis yra greitas čia, jis nedelsiant pradės 20 minučių atgalinį skaičiavimą, o tada lėtai išjunktė šviesą po 20 minučių.

20、Uzlādes padomi: Kad produkts ir pieslēgts enerģijai, mirdzošā gaisma divreiz norāda, ka tā tiek uzlādēta. konstants gaismas režiims - pārvietojiet slēdzi šeit, o nakts gaisma vienmēr būs ieslēgta. Divdesmit minūtes aizkavējiet divdesmit minūtes izslēģšanas režiims: kad slēdzis tiek pātrīnāts šeit, tas nekavējoties sāks 20 minūtes atpakaļ skaitīšanu un pēc tam lēni izslēģs gaismas pēc 20 minūtem.

21、Sfaturi de încărcare: Atunci când produsul este conectat la putere, lumina clipitoare indică de două ori că se încarcă. Modul de lumină constant - Mutată comutatorul aici, iar lumina de noapte va fi întotdeauna aprinsă. Modul de oprire cu întârziere de douăzeci de minute: atunci când comutatorul este accelerat aici, va începe imediat numărarea inversă de 20 de minute și apoi va stinge încet luminile după 20 de minute.

22、Tipy na nabijanie: Keď je produkt pripojený k napájaniu, blikačje svetlo dvakrát naznačuje, že sa nabíja. Konštantný režim svetla - Presu ň te prepínač sem a noēné svetlo bude vīdy zapnuté. Dvadsať minút oneskorenia Dvadsať minút vypnutia režimu: keď je prepínač tu zrýchlený, okamžite začne 20 minút odpočítania a potom pomaly vypne svetlá po 20 minútach.

23、충전 팁: 제품이 전력에 연결될 때, 번개는 빛이 두 번 그것이 charging.constant 빛 모드.여기에 스위치를 이동하고 thenight 빛은 항상 on.Twenty 분 지연 20 분 위위위위위위치가 여기에 swiftd 될 때, 그것은 즉시 20 분 다운카운트다운을 즉시 시작하고, 그리고 20 분 후에 천천히 20 분 후에 조명을 충전등을 충전에 충 충 충전 충전 충전 충전 충전 충전

24、Nasveti za polnjenje: Ko je izdelek prikljuēen na napajanje, utripajoēa luē dvakrat oznaēuje, da se polni.konstantni svetlobni naēin-Premaknite stikalo sem in noēna luē bo vedno vklopljena.Dvajset minut zamude Dvajsetminutni naēin izklopa: ko je stikalo hitro tukaj, se bo takoj zaēelo 20-minutno odštevjanje in nato poēasi ugasnite luēi po 20 minutah.

25、Consigli di ricarica: Quando il prodotto è collegato all'alimentazione, la luce lampeggiante due volte indica che sta ricaricando. Modalità di luce costante - Sposta l'interruttore qui e la luce notturna sarà sempre accesa. Modalità di spegnimento di 20 minuti di ritardo: quando l'interruttore è accelerato qui, inizierà immediatamente il conto alla rovescia di 20 minuti e poi spegnerà lentamente le luci dopo 20 minuti.

26、Dicas de carregamento: Quando o produto está conectado à energia, a luz piscando duas vezes indica que está carregando. Modo de luz constante - Mova o interruptor aqui, e a luz noturna estará sempre ligada. Modo de desligamento de vinte minutos de atraso de vinte minutos: quando o interruptor é acelerado aqui, ele iniciará imediatamente a contagem regressiva de 20 minutos e, em seguida, desliga lentamente as luzes após 20 minutos.

27、Nār produktet er koblet til makt, indikerer lyset to ganger at det lader. Konstant lys-modus-bevege bryteren her, og nattlyset vil alltid være på. 20 Minutt utsettelse av avkjørsel Model: Nār bryteren er byttet her, vil den straks lyse opp a20 minutters nedtelling og så skru av lyset langsomt etter 20 minutter.

28、Hleðslu ábendingar: Þegar vara er tengd rafmagn, blintandi ljós tvisvar gefur til kynna að það er hleðsla. stöðugt ljós Mode-Færðu skiptinn hér, og nótt ljós verður alltaf á. Twenty Mins Delay Twenty-minútna slökkuva Mode: Þegar skiptinn er fljótt hér, mun það strax byrja 20 mínútna afturteljun, og síðan hægt slökkuva á ljósumen eftir 20 mínútur.